

ECO STENCIL INSTRUCTIONS

ITEMS REQUIRED:

- MOST RELIABLE - Epson Sure Color F170 Sublimation Printer
- Epson Eco Tank Printer, ET-2750, ET-2700, ET-2650, or ET-2600.
- 4-ounce bottle of Electrum Eco Stencil formula
- Dispensing cap (provided)
- Gloves

SETUP PROCESS:

- Remove printer from box and follow unpack instructions provided with the printer.
- DO NOT POWER PRINTER ON AT THIS POINT.
- Wear gloves to avoid staining your hands, and for God sake, keep it off of your clothes!
- Access the ink reservoirs on the printer and remove caps on all four tanks.
- Remove the cap and seal from the Eco Stencil bottle and replace with included dispensing cap.
- Dispense the ink equally into all four tanks, 1 ounce per tank. Two bottles will fill the tanks completely.
- Replace caps over reservoirs.
- Plug in the printer and revert back to the owner's manual to complete setup.
- Several initial head cleanings may be required!
- Connect printer to your internet network for wireless printing or direct to your computer via USB cable for direct printing.
- Start printing the most advanced stencils of your life!

SUPPORT:

For any issues with the ink, please contact the supplier you purchased the ink from.

Please note, we are NOT printer manufactures and do not offer technical support for printer related issues. Additionally, we will not be responsible for damaged printers. Please refer to you printers owner manual for proper support numbers related to the actual printer.

Use of third-party inks will often void any warranties, so be sure you understand this prior to utilization of this technology.